



BA30115-2 (05.21)

Operating manual for the superrollo ST110/ST115

This operating manual does not replace the enclosed manuals for the tubular motor. Before you begin, please read this manual through completely and follow all the safety instructions.

Proper use / operational conditions

Only use the radio transmitter for the remote control of:

- ◆ Roller shutters

Operating conditions

The installation and operation of the radio system is only permitted for systems and devices where a malfunction in the transmitter or receiver would not cause a danger to persons or property or where this risk is already covered by other safety equipment.

Only use the radio transmitter in dry rooms.

Incorrect use

Never use controllers with radio technology for the remote control of devices and systems with increased safety-relevant requirements or where there is an increased accident risk. Applications of this kind require additional safety equipment. Observe the respective statutory regulations for the installation of such systems.



For devices containing one or more button/coin-cell batteries, the following safety instructions must be observed:

If the coin-cell battery is swallowed, it can cause severe internal burns and death within just 2 hours.

- ◆ Children must not replace batteries.
- ◆ Do not swallow the battery, risk of acid burns:
- ◆ Store the new and used batteries out of the reach of children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you believe that batteries may have been swallowed or made their way into any part of the body, seek medical advice immediately.

Risk of fire and explosion

- ◆ There is a risk of fire or explosion if the battery is replaced with an incorrect type. In addition, replacing a battery with an incorrect type can override a safety device.
- ◆ Throwing a battery into a fire or hot oven or mechanically crushing or cutting a battery can lead to an explosion.
- ◆ If the battery is placed in an environment with extremely high temperatures, this can lead to an explosion or a spill of flammable liquid or flammable gas.
- ◆ A battery exposed to extremely low air pressure can cause an explosion or the release of flammable liquids or gases.



This labelling indicates that this product must not be disposed of along with other household waste throughout the EU. To avoid potential damage to the environment or human health through uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your old device, please use the return and collection systems or contact the retailer where the product was purchased. They can recycle the product in an environmentally friendly manner.

Inserting batteries

Insert the battery into the battery compartment on the rear side of the radio transmitter. To do this, open the battery cover on the rear side of the device by gently pressing and sliding the cover downwards. Please pay attention to the correct polarity when inserting the battery. Only use the following battery type CR2430.

NOTE

The radio transmitter will not work if the batteries are inserted incorrectly. An incorrectly inserted battery can cause damage to the radio transmitter.

Technical specifications

	superrollo ST110	superrollo ST115
Number of channels:	1	5
Frequency:	433.05 - 434.79 MHz	433.05 - 434.79 MHz
Transmission power:	max. 10 mW	max. 10 mW
Battery type:	CR2430 (3 V)	CR2430 (3 V)
Dimensions (WxHxD):	approx. 40 x 120 x 13 mm	approx. 40 x 120 x 13 mm
Weight:	approx. 50 g	approx. 50 g

Logging the remote control onto the motor (motor on the right)



If the motor is installed on the right-hand side of the roller shutter box, establish the radio connection between the motor and remote control in this way.

1. For the 5-channel radio transmitter ST115, use the outer buttons to select the channel on which the motor is to be logged on. Only one LED may be lit (all LEDs = all channels)
2. Switch the motor off and wait approximately 10 seconds.
3. Switch the motor on again.

You will hear a long beep from the motor.

4. Press the P2 button (1) next to the battery compartment on the rear side of the remote control.
5. Press the UP button (2) once.

You will hear seven short beeps from the motor.

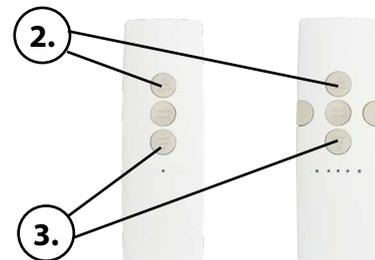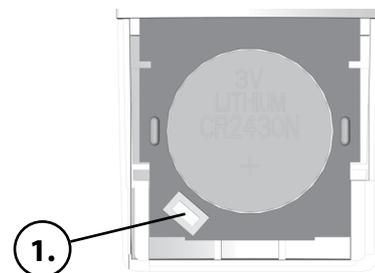

Logging the remote control onto the motor (motor on the left)

If the motor is installed on the left-hand side of the roller shutter box, establish the radio connection between the motor and remote control in this way.

1. For the 5-channel radio transmitter ST115, use the outer buttons to select the channel on which the motor is to be logged on. Only one LED may be lit (all LEDs = all channels)
2. Switch the motor off and wait approximately 10 seconds.
3. Switch the motor on again.

You will hear a long beep from the motor.

4. Press the P2 button (1) next to the battery compartment on the rear side of the remote control.
5. Press the DOWN button (3) once.

You will hear seven short beeps from the motor.





Activating or deactivating the Dot-move setting

You can use the Dot-move setting to move the roller shutter up or down in sections. You must deactivate the Dot-move setting again to move the roller shutter up or down continuously. To activate or deactivate the Dot-move setting, proceed as follows:

1. For the 5-channel radio transmitter ST115, use the outer buttons to select the channel on which the motor is to be logged on. Only one LED may be lit (all LEDs = all channels)
2. Switch the motor on and wait approximately 10 seconds.
3. Press the P2 button (1) once on the remote control.
4. Press the UP button (2) on the remote control.
5. Press the P2 button (1) once on the remote control.

You will hear three short beeps from the motor.

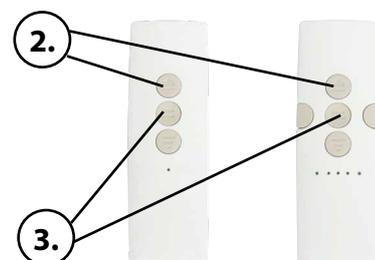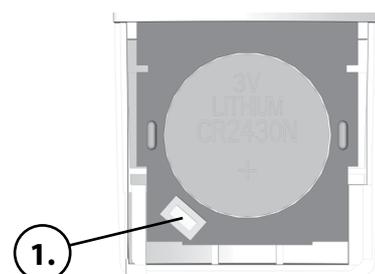

Logging off a remote control

To log a remote control off from the motor, proceed as follows:

1. For the 5-channel radio transmitter ST115, use the outer buttons to select the channel on which the motor is to be logged on. Only one LED may be lit (all LEDs = all channels)
2. Switch the motor on and wait approximately 10 seconds.
3. Press the P2 button (1) once on the remote control to be logged off.
4. Press the STOP button (3) on the remote control.
5. Press the P2 button (1) once on the remote control.

You will hear four short beeps from the motor.

Simplified EU declaration of conformity

superrollo Hausautomatisierung GmbH hereby declares that the manual transmitter (ST110/ST115) complies with the Directive

 2014/53/EU (Radio Equipment Directive).

The full text of the declaration of conformity is available at the following website:

www.superrollo-online.de

superrollo Hausautomatisierung GmbH

Buschkamp 7,

46414 Rhede (Germany)

Warranty terms and conditions

You can find information about the warranty conditions of our products on our homepage.